

Installation Notes for John Deere 844J Loader (JD 6125 Engine)

(Note) Even though a banjo fitting has been provided, some engines have been known to have different size drain plugs, requiring a different size banjo fitting. If the banjo fitting provided does not match to the specific drain plug size contact your local Puradyn dealer or Puradyn directly at 1 866 PURADYN (787 2396) for a different size banjo fitting.


The following document is used in conjunction with the **puradYN**® Oil Filtration System Installation Manual (PFT24) that is included in the unit box, and as such, should be considered a supplemental source of information. Further, this document covers the installation of a PFT 24 Oil Filtration System on a **John Deere 844J Excavator (JD 6125 Engine)**.




Mounting the Unit: The PFT24 Oil Filtration system should be mounted inside the engine compartment (**Picture 1**). Mount the unit to the engine mounting pads (**Picture 2**). Use supplied mounting plate (**Picture 3**). Mount plate to engine pads (**Picture 4**). Mount Unit to bracket using supplied hardware (**Picture 5**).




Picture 1

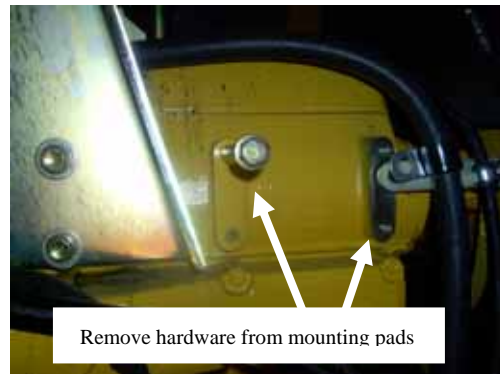

Picture 2

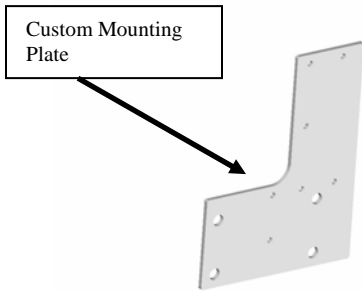


Picture 3

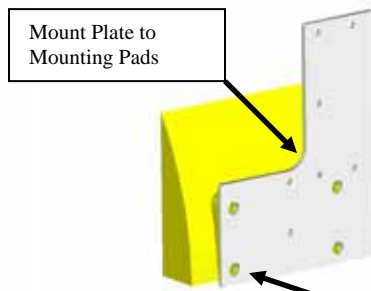

Picture 4

Bolts (4) NOT supplied

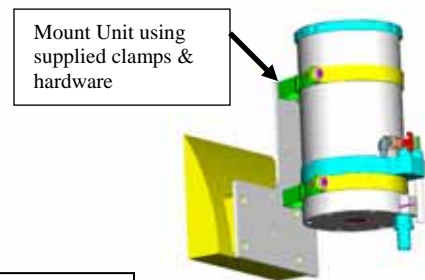

Picture 5

Reconnect Hardware & Re-route Hoses: Re-route the breather hose behind the mounting plate & secure with hose clamp (**Pictures 6 & 7**). Re-connect hardware, use washers or spacer to make good contact (**Picture 8**). Cut off $\frac{1}{4}$ " of brass sleeve & re-connect using existing hardware and clamp for wire harness (**Pictures 9, 10 & 11**).



Picture 6



Picture 7




Picture 8



Picture 9




Picture 10

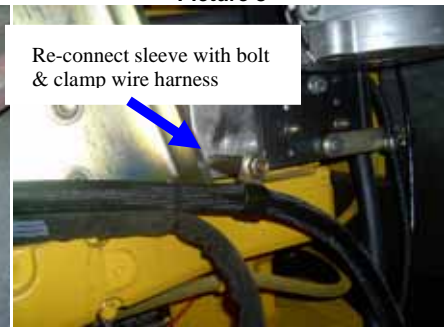


Picture 11

Installing the pressure fittings: Install the 90° shut-off valve (supplied) using supplied $\frac{1}{4}$ "NPT fittings (**Picture 12**). Route high-pressure hose to the 90° valve on the engine. Connect hose to 90° shut-off valve. Install metering jet assembly and connect hose.

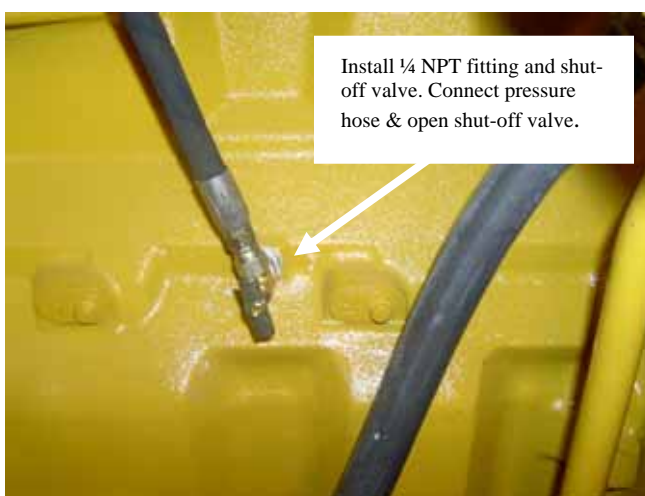

Picture 12

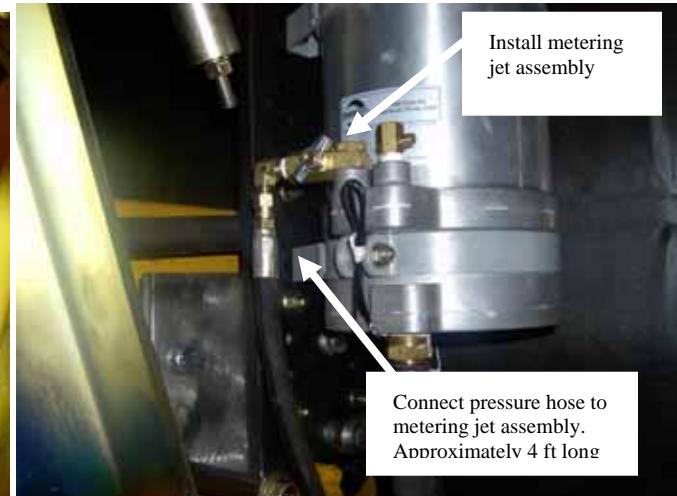

Picture 13

Installing the Return Line: Remove the oil drain plug on the side of the oil pan. Install the Banjo fitting to the drain pan (**Picture 15**). Install hose barb fitting into the return port on unit (**Picture 17**). The PFT24 Oil Filtration

Installation Notes for John Deere 844J Loader (JD 6125 Engine)

Kit 01-80002

DOC 19-00108

system oil return hose routing should not come in contact with any moving parts or sharp edges. After draining the engine oil and cleaning all surfaces, install the return fitting into the oil pan drain port.

Note: Properly orient the fitting in order to avoid damage from road debris. Connect the oil return hose; **make sure hose is routed in downward slope, with no kinks or traps, to oil pan!** Oil is returned by gravity (SEE INSTALLATION MANUAL)! Secure in place with clamps if necessary.


Note: If necessary, cover the oil return hose with a secondary hose (or equivalent) to better protect it from getting damaged.




Picture 14




Picture 15

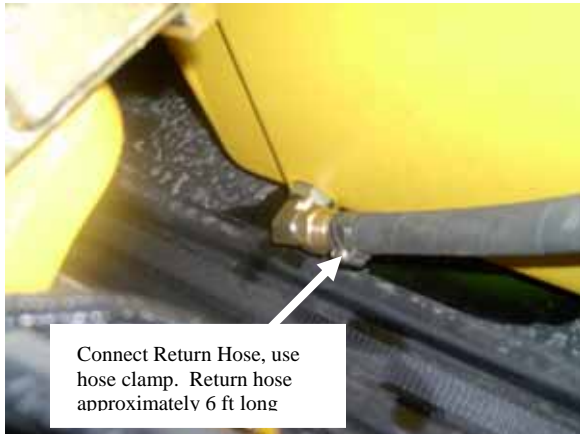


Picture 16

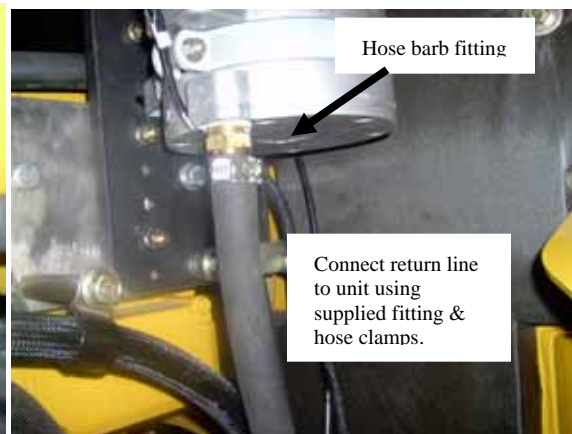

Picture 17

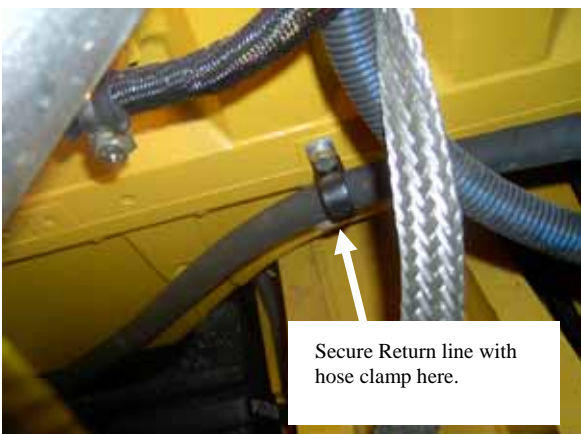


Picture 18

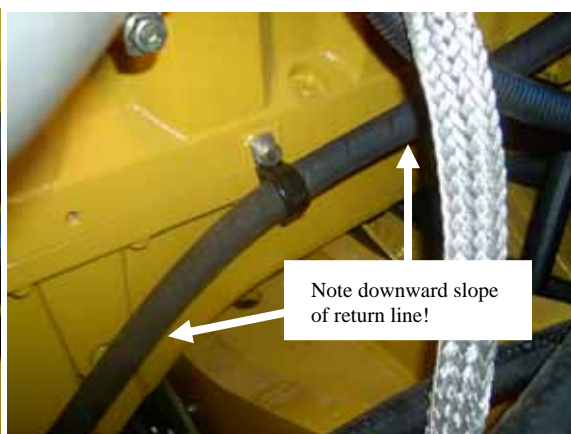


Picture 19

Installing the Puradyn Heater: Route one electrical wire to the **puraDYN**[®] bracket for your ground. (See **Picture 7**) run the other **puraDYN** wire to ignition power using supplied electrical hardware and in-line fuse. (See **Picture 6**) Also, ensure that both hose and wire routing does not come in contact with moving parts, sharp edges or hot exhaust manifolds.

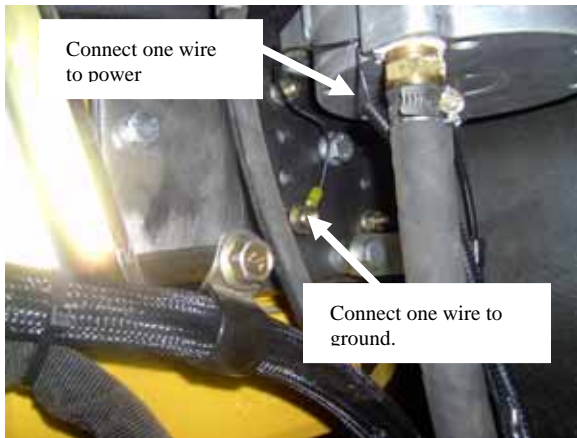


Picture 20

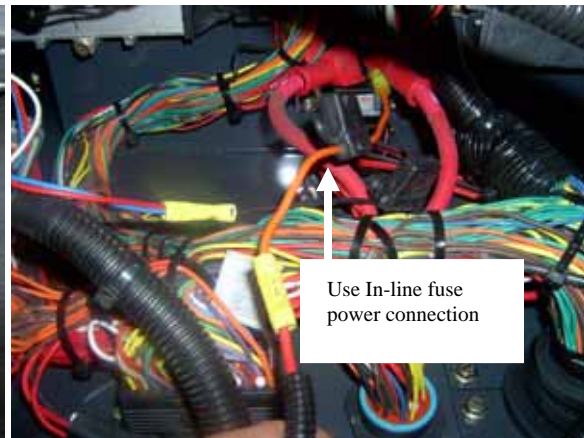

Picture 21



Picture 22

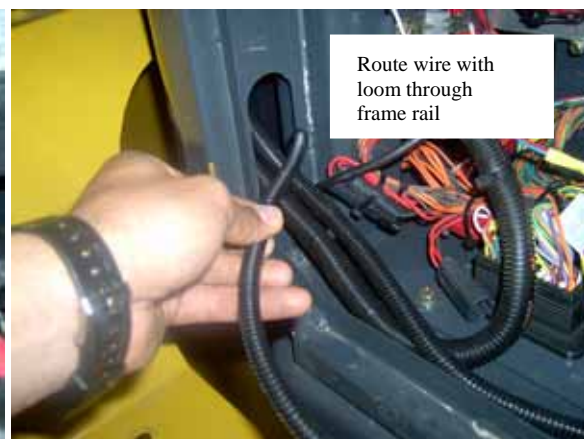

Picture 23

Tie off all lines with tie wraps. Fill engine with oil. Start engine and check all connections for oil leaks. Open metering jet sample valve and verify that oil flow is present. After five minutes of engine operation, touch the bottom center of the PFT Oil Filtration system and verify that it is warm to the touch. Shut engine off and check oil level. Place Puradyn Installation Manual (PFT8 through PFT60) in the documentation holder mounted to the equipment


TROUBLESHOOTING SECTION

The **paraDYN** system has been engineered in a quality system certified to ISO 9001. It is manufactured from the highest quality materials available with superior workmanship. If, however, your **paraDYN** system is not functioning properly, check the following conditions as indicated:

1) Restricted oil Flow:

- Pressure line may be clogged.....blow line out with high air pressure (**do this first**)
- Shutoff valve maybe closed..... open valve
- Filter may be dirty and clogged.....replace with new filter
- Metering jet screen maybe clogged.....clean screen thoroughly
- If metering jet is clogged.....clean metering jet thoroughly

Cleaning the Metering Jet Assembly (PFT MODEL)

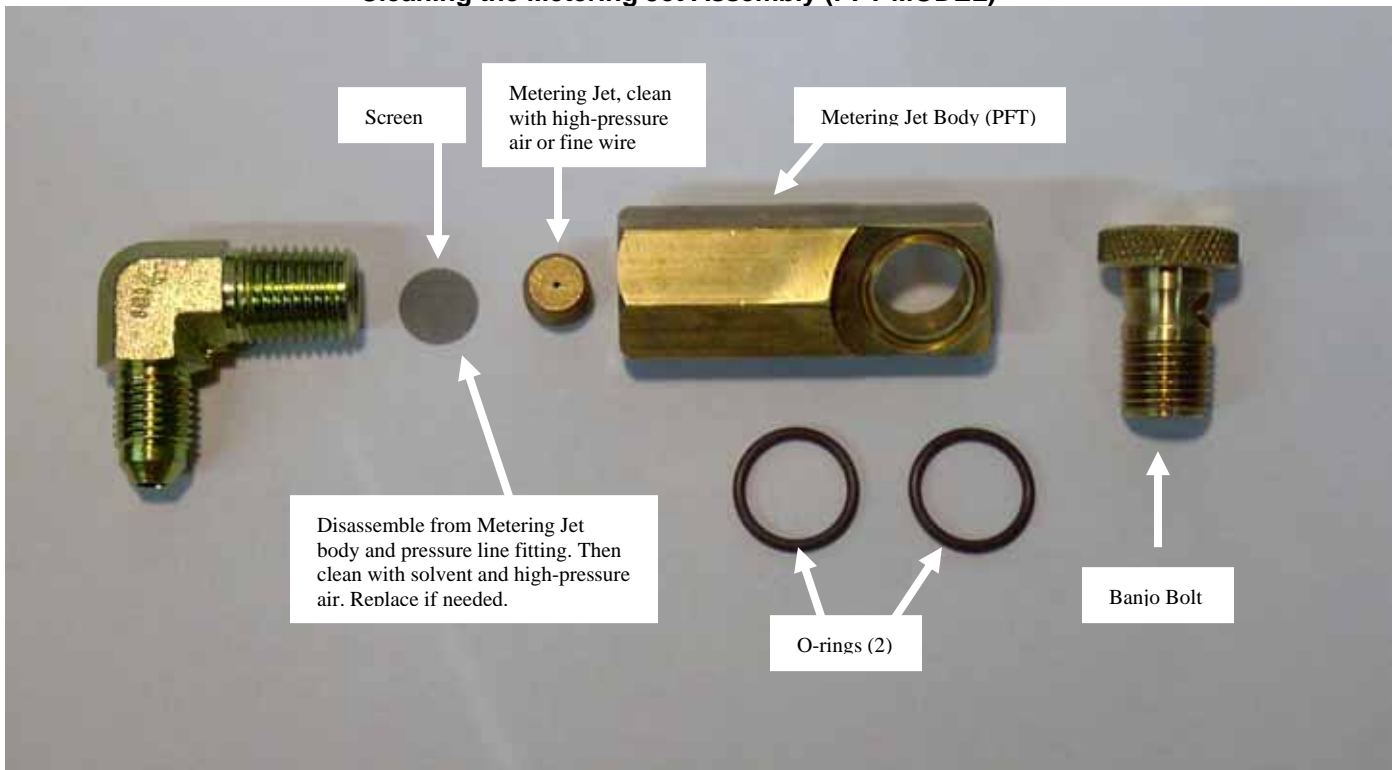

2) Oil coming out of vapor tube:

- If there is a sharp bend, dip or trap in return hose, re-route hose to eliminate. (Oil returns by gravity.)
- Make sure the oil return line is always dropping into a non-pressurized location on the engine.
- For best results, the oil return line should be located below the oil level in pan.
- If oil comes out of vapor tube, the problem could be internal backpressure from a malfunctioning engine and must be corrected by the engine dealer.

3) If the top of the paraDYN system is not warm after 5 (five) minutes of operation:

- Check in line fuse...if good, check power source and ground. With the ignition on and engine off, use voltmeter to check for proper voltage across the two wires.
 - a) 12-volt system: should read between 12-13 Volts
 - b) 24-volt system: should read between 24-26 Volts
- If voltage is correct, the heater element is burned out and needs to be replaced.

Installation Notes for John Deere 844J Loader (JD 6125 Engine)

Kit 01-80002

DOC 19-00108

Heating Element Electrical Connections


Make sure the voltage to the heating element matches the voltage for which the element is rated. The heating elements are single voltage compatible, designed to operate on 14VDC or 28VDC / 110VAC or 220-VAC.

As an example for the 12-volt system, take one of the lead wires from the heater using one of the terminal rings and attach it to a “good” ground, normally located on the frame. Run the second lead to the accessory side of the fuse panel. You may need to run the wire along the frame rail. Wire the unit through the firewall following the wire harness and route our wire going to the fuse box. When you reach the fuse box, you will need to find an accessory fuse that can handle a minimum of 15 amps. **Be sure to select a terminal that is “OFF” when the ignition is “OFF”.** Also install our **in-line fuse holder**, prior to installing the final connection, which acts as a **fuse-link to protect the heating element.**

WARNING!!! Never connect the heating element directly to the ignition system , brake system or battery.

1. Choose a power source that is ignition-controlled; i.e., off when the engine is off, on when the engine is running.

3. Connect second lead of the heating element to a fuse in the fuse box on the accessory side (note amperage draw).

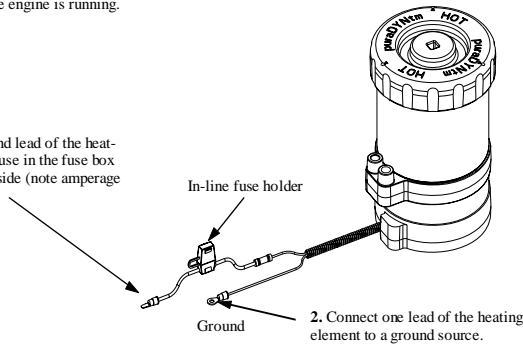

Oil Analysis Procedures

The **puraDYN** Filter Technologies Oil Management Program includes an oil-analysis schedule that assists our customers in achieving the benefits of extended oil drain intervals and longer service life for their engines and equipment.

Oil analysis is the key to achieving the benefits that result from optimized oil life (with reasonable safety precautions) and extended drain intervals. In addition, oil analysis is the only economical way to measure wear or contamination in the engine or equipment. Of primary importance is the interpretation of the test data, which is easy to read and self-explanatory.

The **puraDYN** oil analysis is conducted by an independent laboratory and is reported in an easy to understand format which includes the following data:

- * Spectrographic metals
- * TBN & TAN
- * Wear metals
- * Contaminant metals

This data must be monitored to fully evaluate the lubrication system. The analysis will provide a “picture” and warning, if necessary, of any existing or potential problems.