



PURADYN OIL FILTER REPLACEMENT INSTRUCTIONS – DIESEL ENGINE

TF240 vs MODIFIED TF240 vs MTS240 / M85

IDENTIFY WHICH SYSTEM YOU ARE USING BEFORE STARTING

Original TF 240 uses filter p/n 02-42405TF

Modified TF 240 (electrical removed) uses 02-M85X4G

Replacement Lid Gasket and O-ring included with filter

M85 and MTS 240 use filter p/n 02-M85X4


M85 and MTS 240 have a higher 7.5" base and no diffuser or O-ring.

Lid Gasket (sold separately) is only replaced if damaged.

1. Before changing the filter, take an oil sample using instructions found on next page.
2. Either shut off engine or close shut-off valve to stop oil flow to the Puradyn unit. Wait a few minutes to allow oil to drain from unit before changing the filter element.
3. Loosen the four nuts on lid retaining studs enough to allow the studs to swing clear of head.
⚠ The lid and diffuser may be HOT.
4. Remove the lid from unit canister. Remove flat gasket from lid and discard.
5. Remove diffuser and O-ring. Discard O-ring.
6. **⚠ Filter element may be HOT and top cut-outs may have sharp edges.** Using the wire handle, firmly twist filter less than a one-quarter turn to disconnect and pull up to remove. Remove new filter element from plastic bag and place old filter into bag to help prevent oil spills. Close bag with supplied tie wrap and dispose.
7. Insert the new filter element in the unit, making sure the rubber grommet at the bottom fits securely over the nipple at the bottom of the unit canister.
8. Install new O-ring (provided) on top of the new filter.
9. Place diffuser on top of the new filter & the O-ring, making sure to align the slot in the diffuser with the return fitting of the unit.
10. Install new flat Lid Gasket (provided) and place the lid on unit, making sure the flat gasket on the underside of the lid is securely in place.
11. Swing the four studs into position to tighten.
12. Following the 1-2-3-4 numbering pattern on top of lid, tighten the nuts securely (5-8 ft-lbs torque). For more information or if torque wrench is not available, see next page.

13. Add 3 gallons replacement oil to the sump

14. Check oil level after 30 minutes running time to determine if more makeup oil is needed.

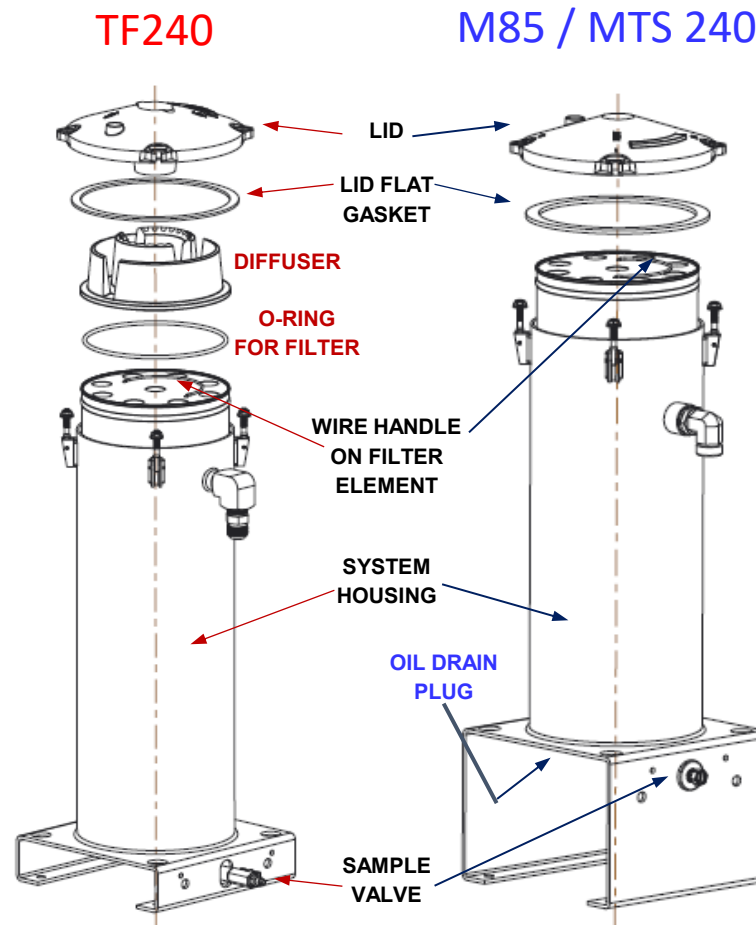

Maintain a minimum vertical clearance of 20 inches for easy removal and replacement of filter element

1. Before changing the filter, take an oil sample using instructions found on next page.
2. Either shut off engine or close shut-off valve to stop oil flow to the Puradyn unit. Wait a few minutes to allow oil to drain from unit before changing the filter element.
3. Loosen the four nuts on lid retaining studs enough to allow the studs to swing clear of head.
⚠ The lid may be HOT.
4. Remove the lid from unit canister and set it down gasket side up. Check flat gasket inside lid for excessive wear or splitting. If needed, replacement flat lid gasket sold separately ([p/n 18-40014](#))
5. To reduce spillage, you may use the Oil Drain Plug found under the system housing to drain all standing oil before removing the filter.
6. **⚠ Filter element may be HOT and top cut-outs may have sharp edges.** Using the wire handle, firmly twist filter less than a one-quarter turn to disconnect and pull up to remove. Remove new filter element from plastic bag and place old filter into bag to help prevent oil spills. Close bag with supplied tie wrap and dispose.
7. Insert the new filter element in the unit, making sure the rubber grommet at the bottom fits securely over the nipple at the bottom of the unit canister.
8. Place the lid on unit and swing the four studs into position to tighten.
9. Following the 1-2-3-4 numbering pattern on top of lid, tighten the nuts securely (5-8 ft-lbs torque). For more information or if torque wrench is not available, see next page.
10. **Add 3 gallons replacement oil to the sump**
11. Check oil level after 30 minutes running time to determine if more makeup oil is needed.

Procedures For Correct Closing and Sealing Of System After Filter Replacement



1. Line up torque bolts with slots on lid, and place lid centered on top of canister rim to get a proper seal.



2. Flip bolts to the upright position, look for numbers **1, 2, 3, 4** on top of lid




Start at 1

3. Following the 1-2-3-4 numbering pattern on top of lid, tighten the nuts securely with a torque wrench set to 5-8 ft-lbs torque.



If torque wrench is not available, hand-tighten each bolt and go to Steps 4-6 (below)

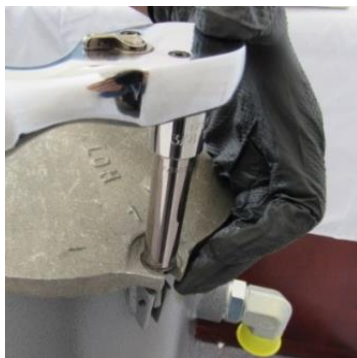

4. Starting with corresponding number **1**, tighten lid bolt with **12** no. of $\frac{1}{4}$ (90-degree) wrench turns



5. On corresponding number **2**, tighten lid bolt with **8** no. of $\frac{1}{4}$ (90-degree) wrench turns (*do not exceed 8 no. of $\frac{1}{4}$ wrench turns*)



6. On corresponding numbers **3 and 4**, tighten lid bolt with **6-7** no. of $\frac{1}{4}$ (90-degree) wrench turns (*do not exceed 8 no. of $\frac{1}{4}$ wrench turns*)



Completely Closed Puradyn System

INSTRUCTIONS FOR TAKING AN OIL SAMPLE

1. Engine must be running at normal operating temperature for sample to be taken accurately.
2. Open sample valve and flush about 1-2 ounces of oil to remove debris from valve.
3. Take sample of oil (2-3 ounces) using supplied bottle
4. Close sample valve and tighten securely.
5. Secure the lid on oil sample bottle and place inside the oil sample container.
6. Fill in all information requested on the oil sample form and mail the pre-labeled & pre-paid container to the lab.