

Installation Notes for Magnum 125 KW Generator W/John Deere Engine

KIT 01-30003

DOC 19-00034

The following document is used in conjunction with the **puraDYN®** Bypass Oil Filtration System Installation Manual (PFT8 through PFT60) that is included in the unit box, and as such, should be considered a supplemental source of information. Further, this document covers the installation of a PFT24 Bypass Oil Filtration unit on a **Magnum 125 KW Generator W/John Deere Engine.**



The PFT24 Bypass Oil Filtration unit should be mounted to the side square boss located on the side of the engine mark. Drill 4 each holes in the 20" mounting plate to match the 4 holes in the square boss on the engine. Attach with 4 each 3/8"x 1" bolts.



Installation Notes for Magnum 125 KW Generator W/John Deere Engine

KIT 01-30003

DOC 19-00034

Route oil supply high-pressure hose to an engine oil galley port or pressure sender port and make connection using supplied brass/steel fittings and shut-off valve. Connect hose to shut-off valve and puraDYN® Filter Unit.



PFT24 Bypass Oil Filtration unit oil return hose routing should not come in contact with any moving parts or sharp edges. After draining the engine oil and cleaning all surfaces, install the banjo fitting into the oil pan drain port. **Note:** Properly orient the fitting in order to avoid damage from road debris. Connect the oil return hose and secure in place with radiator clamps. **Note:** If necessary cover the oil return hose with a secondary hose (or equivalent) to better protect it from getting damaged.

Installation Notes for Magnum 125 KW Generator W/John Deere Engine


KIT 01-30003

DOC 19-00034

Note: Even though a banjo fitting has been provided, some engines have been known to have different size drain plugs, requiring a different size banjo fitting. If the banjo fitting provided does not match to the specific drain plug size contact your local **puraDYN** dealer or **puraDYN** directly (866- puraDYN) for a different size banjo fitting.



Route one electrical wire to an ignition "on" power source and the other wire to a good ground using supplied electrical hardware and in-line fuse. Also, ensure that both hose and wire routing do not come in contact with moving parts, sharp edges or hot exhaust manifolds.

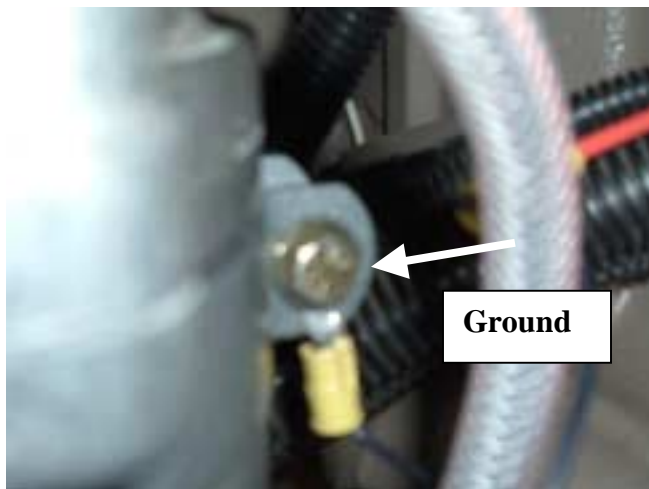

Fill engine with oil. Start engine and check all connections for oil leaks. Open metering jet sample valve and verify that oil flow is present. After five minutes of engine operation, touch the bottom center of the PFT Bypass Oil Filtration unit and verify that it is warm to the touch. Shut engine off and check oil level. Place **puraDYN** Installation Manual (PFT8 through PFT60) in the documentation holder mounted to the outside rear panel.