

Installation Notes for 777D Hauler With a Cat 3508B EUI Engine

01-50010


DOC 19-00057

(Note) Even though a banjo fitting has been provided, some engines have been known to have different size drain plugs, requiring a different size banjo fitting. If the banjo fitting provided does not match to the specific drain plug size contact your local puraDYN dealer or puraDYN directly (866- puraDYN) for a different size banjo fitting.


The following document is used in conjunction with the puraDYN® Bypass Oil Filtration System Installation Manual (TF 240) that is included in the unit box, and as such, should be considered a supplemental source of information. Further, this document covers the installation of a TF 240 Bypass Oil Filtration unit on a Rinker 777D Hauler with CAT 3508B EUI Engine



Mounting the Unit: The TF 240 Bypass Oil Filtration unit should be mounted to the walking platform (**PICTURE 1**). Weld the base bracket to the platform. Mount the unit to the base bracket. Attach with the supplied hardware. (See **PICTURES 1 & 2**)

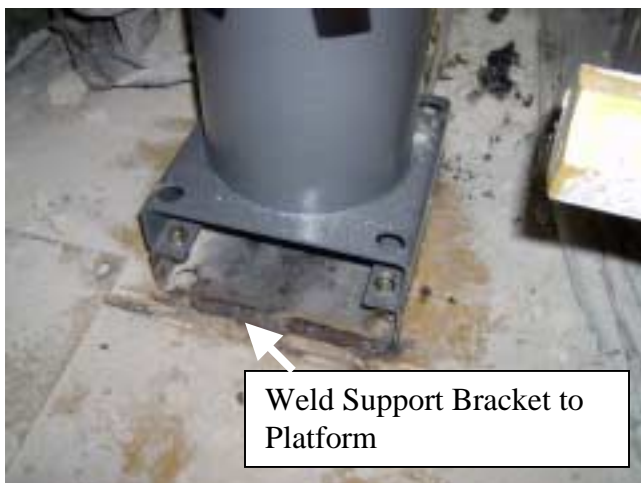


PICTURE 1

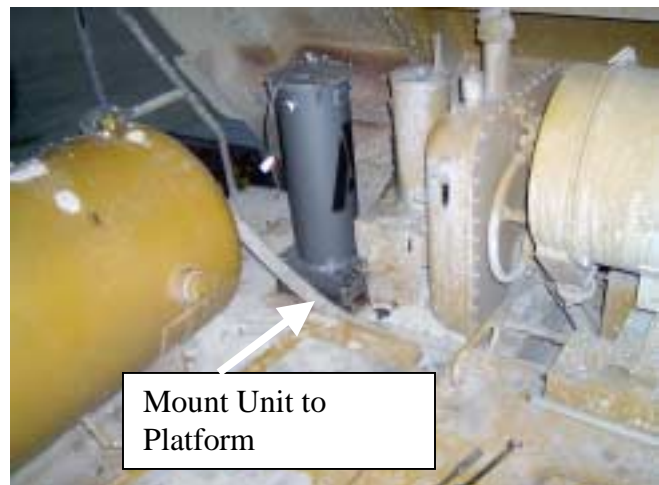

PICTURE 2

Installation Notes for 777D Hauler With a Cat 3508B EUI Engine

Installing the pressure fittings: Remove the Oil pressure switch (**PICTURE 3**) and install the 90° shut-off valve (supplied) connected to a 7/16 Boss O-ring fitting (**PICTURE 4**). Route high-pressure hose to the 90° valve on the engine. Connect hose to 90° shut-off valve and puraDYN® Filter Unit.

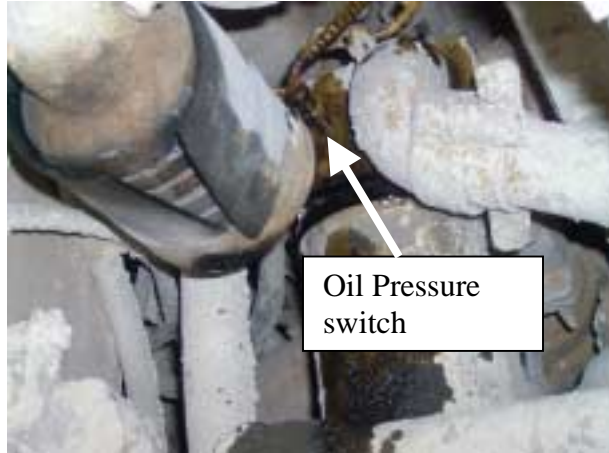

PICTURE 3



PICTURE 4

Installing the Banjo Fitting: Remove the oil drain plug on the side of the oil pan. Install the fitting to the drain pan (**PICTURE 5**). The TF240 Bypass Oil Filtration unit oil return hose routing should not come in contact with any moving parts or sharp edges. After draining the engine oil and cleaning all surfaces, install the return fitting into the oil pan drain port. Note: Properly orient the fitting in order to avoid damage from road debris. Connect the oil return hose and secure in place with radiator clamps. Note: If necessary, cover the oil return hose with a secondary hose (or equivalent) to better protect it from getting damaged.



PICTURE 5

Installation Notes for 777D Hauler With a Cat 3508B EUI Engine


01-50010

DOC 19-00057

Installing the puraDYN® Heater: Route one electrical wire to the **puraDYN®** bracket for your ground. (See **PICTURE 6**) run the other **puraDYN®** wire to ignition power using supplied electrical hardware and in-line fuse. (See **PICTURE 7**) Also, ensure that both hose and wire routing does not come in contact with moving parts, sharp edges or hot exhaust manifolds.



PICTURE 6

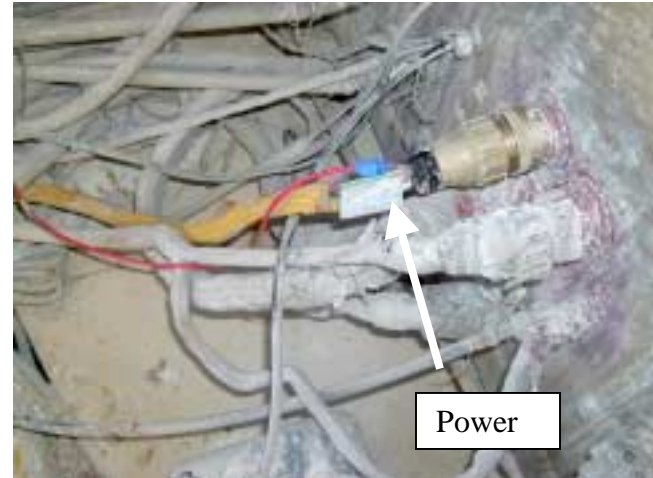

PICTURE 7



PICTURE 8

Tie off all lines with tie wraps. Fill engine with oil. Start engine and check all connections for oil leaks. Open metering jet sample valve and verify that oil flow is present. After five minutes of engine operation, touch the bottom center of the PFT Bypass Oil Filtration unit and verify that it is warm to the touch. Shut engine off and check oil level. Place **puraDYN®** Installation Manual (PFT8 through PFT60) in the documentation holder mounted to the equipment